Spring Pin Socket User Manual





Ironwood Electronics HIGH PERFORMANCE SOCKETS & ADAPTERS

Tel: (800) 404-0204 • (952) 229-8200 Fax: (952) 229-8201 11351 Rupp Dr. Suite 400, Burnsville, MN 55337 www.ironwoodelectronics.com

Spring Pin Socket User Manual

Selecting a BGA Spring pin socket	2
PCB Requirements	
Thickness	
Finish	3
Cleanliness	3
IC and PCB Reflow Requirement	3
Socket Assembly	4
Backing and insulation Plate	
IC Insertion/extraction	6
1mm & 1.27mm Center - Spring Probe Specification	
0.8mm Center - Spring Probe Specification	7
0.5mm Center - Spring Probe Specification	7
0.4mm Center - Spring Probe Specification	
Socket Maintenance	9
Light Cleaning Procedure	10
Heat Sink Specifications	

Ironwood Electronics

Tel: (800) 404-0204 • (952) 229-8200 Fax: (952) 229-8201 11351 Rupp Dr. Suite 400, Burnsville, MN 55337 www.ironwoodelectronics.com

Socket Mechanics

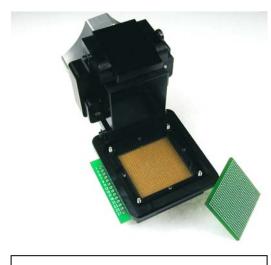


Figure 1: Spring Pin Socket

SS-BGA sockets provide high bandwidth in a small, cost effective ZIF socket for prototype, test and burn-in applications. SS-BGA socket is a simple, mechanical socket based on spring pin technology. SS-BGA socket is a solder-less socket that can be mounted on to a PCB using supplied hardware. The PCB

mounting should have and alignment holes at proper locations (see page 2 of the drawing for recommended PCB layout information). The typical SS-BGA socket footprint is only 5mm larger than the maximum IC size. It is compatible with the alternate SG-BGA (elastomer) socket footprint. If there are pre-existing holes in the PCB, an SS-BGA socket can

be custom designed to accommodate those holes (please call Ironwood Tech Support @1-800-404-0204).



Figure 2: Picture of 1mm center - Spring Pin

Figure 1 shows a typical spring pin socket. The spring pin functions as the \Box contactor between the IC package and the circuit board. The spring pin us

contactor between the IC package and the circuit board. The spring pin used in the socket is a low-resistance ($<0.02\Omega$) connector. Figure 2 shows a picture of the 1mm center – double ended spring pin. Double ended spring probes are primarily comprised of two plungers, barrel and spring. The spring (gold plated music wire) is sandwiched between two plungers (gold plated hardened Beryllium Copper) inside the barrel (gold plated Phosphor Bronze). The spring probe has high current rating (4.0A continuous, single probe in free air @ ambient). The operating temperature range is -40° to 150° C.

The solder balls from the IC package come in contact with the crown end of spring pin. The bottom end of spring pin contacts the circuit board pad, completing an electrical path for the signal. The socket mechanism can be summarized as a downward force applied on the IC which compresses solder balls on the spring probe which in turn compresses on the circuit board and thereby making electrical connection.

Selecting a BGA Spring pin socket

Please refer to the IC package drawing to select the corresponding BGA spring pin socket. Visit the Ironwood website: <u>www.ironwoodelectronics.com</u>. Select the "Products" link. Next, under the "Browse" menu, select the "GHz BGA & MLF Socket (SG, SS)" link. In the table, select the part number from the first column which corresponds to your pin count, IC body size, array size, and pitch. The top webpage frame will show a link to the drawing, a picture of the socket (JPEG format), and provide low-volume price information. The drawing is a four page PDF file. The first page shows the socket cross sectional views and the material details. The second page provides the recommended PCB layout (Note: BGA pads

are not symmetrical to the mounting holes). The third page shows the compatible BGA specification. The fourth page details backing/insulation plate dimensions. Check the BGA pattern and the following four parameters.

- 1. IC co-planarity value should be less than or equal to that shown in the table.
- 2. Maximum total height of IC should be less than or equal to that shown in the table.
- 3. Maximum solder ball diameter of IC should be less than or equal to that shown in the table.
- 4. Maximum and minimum solder ball height should fall within the range shown in the table.

If any of the above parameters do not match, please call Ironwood Tech Support @1-800-404-0204 to help select a socket (which may currently be in development).

PCB Requirements

Please refer to page 2 of the socket drawing for all PCB recommendations.

For IC body sizes of 30mm or below, the socket requires 4 mounting holes.

For IC body sizes of 31mm or above, the socket requires 8 mounting holes.

Two alignment holes are used in all sockets. The center for the first is 2.54mm below the upper right mounting hole center and the second has a center dimension 5.08mm above the lower left mounting hole center.

The BGA pattern is not symmetrical to the mounting holes. The BGA pattern is same as the one used for the elastomer socket. It is shifted due to the fact that the wire filaments in the elastomer are at an angle (the shift is half the elastomer thickness in the positive x-direction). The same footprint used by elastomer socket is recommended for spring pin socket for interchangeability. Again, please refer to page 2 of the drawing for recommended footprint.

Thickness

1.5mm minimum. This will change per customer application, environment and usage.

Finish

SnPb plating or Immersion Au or Immersion Ag. Other plating may be used but testing may be required. Solder mask clearance over pad surface is acceptable.

Cleanliness

Isopropyl Alcohol or equivalent should be used to clean the board surface prior to attaching socket.

IC and PCB Reflow Requirement

If the same IC is used for number of cycles, crown tip on spring pin damages the Sn63Pb37 solder balls on IC and conical tip damages HASL(hot air solder level) pads on PCB. From our test results, we recommend reflowing IC solder balls every 10 cycles and HASL PCB every 30 cycles. Gold plated PCBs will not need any reflows.



Socket Assembly

Refer to figure 4 for graphical illustrations.


1. Install the socket base assembly onto the target PCB with the hardware (socket base screws) provided. Because of asymmetrical tooling holes, the socket can be assembled with only one orientation.

2. Open the clamshell lid and place BGA package (solder ball side down) into the socket. NOTE: BGA orientation on target PCB is critical. If an IC frame (optional) is supplied, place it over the BGA package. This IC frame may be necessary for packages which the encapsulate around the die does not extend to the edge of the IC's substrate.

3. Close the clamshell lid.

4. Turn the compression screw clockwise, until the compression plate makes contact with the BGA package.


5. Turn the compression screw further so that BGA balls are compressed on the spring pins to make contact. When turning becomes hard, full compression is achieved. Internal stops will prevent over compression when turned by hand.

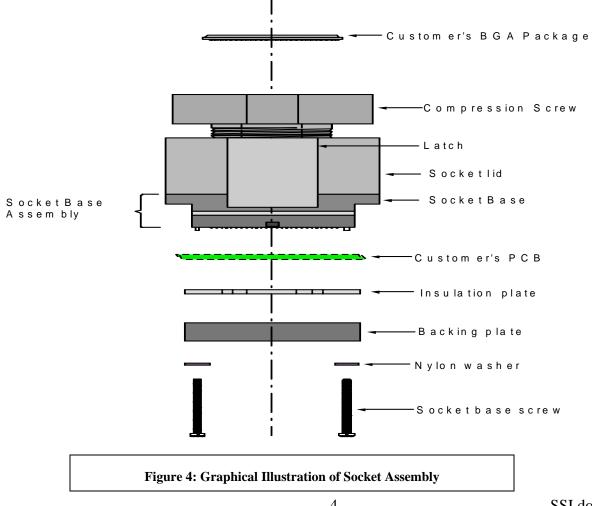



Backing and insulation Plate


For all IC body sizes, spring pin sockets require a rigid metal backing plate to prevent deflection of the target circuit board due to a high normal force required to compress the spring pins. If the backside of the target PCB contains capacitors and resistors, a custom insulation plate with cavities cut for those components can be designed. This insulation plate sandwiches between the backing plate and target PCB as shown in figure 4. Figure 5 shows an example of a custom insulation plate.

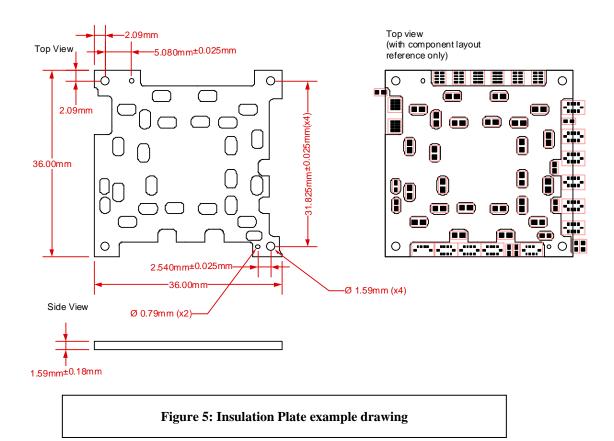



IC Insertion/extraction

A vacuum pen is recommended for insertion/extraction of ICs. Figure 6 shows a typical vacuum pen. TL-vacuumpen-01 can be purchased separately. Hand insertion of ICs and extraction using a small tweezers is also acceptable.

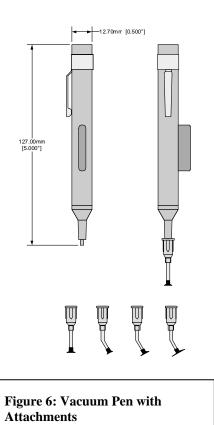

SSI.doc, Rev. A, IP Rev. B/C/D, RP Rev. E, VP



Tel: (800) 404-0204 • (952) 229-8200 Fax: (952) 229-8201 11351 Rupp Dr. Suite 400, Burnsville, MN 55337 www.ironwoodelectronics.com

1mm & 1.27mm Center - Spring Probe Specification

Operating Temperature

Continuous usage: -40°C to +150°C

Mechanical Specifications

Individual spring pin force

30g (1.1oz) at 0.098" (2.49mm) recommended operating position **Spring pin cycle life** 500,000 cycles

Electrical Specifications	P-P112A / P-P138A	P-P127A
Contact resistance:	27.38mΩ	28.19mΩ
Self Inductance:	0.62nH	0.70nH
Mutual Inductance:	0.065nH	
Cross talk:	<-10dB to 8GHz	
Insertion loss:	<0.5dB to 4.1GHz	
	<1 dB to 10GHz	
Rise time	24.6 ps	
Pin to ground Capacitance:	0.45pF	
Pin to pin Capacitance:	0.042pF	
Current carrying capacity:	4A	4.5A

0.8mm Center - Spring Probe Specification

Operating Temperature

Continuous usage: -40°C to +120°C

Mechanical Specifications

Individual spring pin force

22g (0.8oz) at 0.162" (4.11mm) recommended operating position **Spring pin cycle life** 500,000 cycles

Electrical Specifications	P-P114A	
Contact resistance:	18.62mΩ	
Self Inductance:	0.84nH	
Insertion loss:	<1dB to 6.7 GHz	
	<3dB to 12 GHz	
Pin to ground Capacitance:	0.76pF	
Pin to pin Capacitance:	0.068pF	
Current carrying capacity:	3A	

0.5mm Center - Spring Probe Specification

Operating Temperature

Continuous usage: -40°C to +150°C

<u>Mechanical Specifications</u> Individual spring pin force **Ironwood Electronics**

HIGH PERFORMANCE SOCKETS & ADAPTERS

Tel: (800) 404-0204 • (952) 229-8200 Fax: (952) 229-8201 11351 Rupp Dr. Suite 400, Burnsville, MN 55337 www.ironwoodelectronics.com

16g (0.56oz) at 0.150" (3.81mm) recommended operating position **Spring pin cycle life**

500,000 cycles

Electrical Specifications	P-P115A / P-P139A	
Contact resistance:	82.28mΩ	
Self Inductance:	1.3nH	
Mutual Inductance:	0.15nH	
Cross talk:	<-15dB to 6.5GHz	
Insertion loss:	<0.25dB to 4.5 GHz	
	<3dB to 10 GHz	
Rise time	<26 ps	
Pin to ground Capacitance:	0.53pF	
Pin to pin Capacitance:	0.045pF	
Current carrying capacity:	2.5A	

0.4mm Center - Spring Probe Specification

Operating Temperature

Continuous usage: -40°C to +120°C

Mechanical Specifications

Individual spring pin force 20g (0.7oz) at operating position **Spring pin cycle life** 500,000 cycles

Electrical Specifications	P-P136A / P-P134A
Contact resistance:	62mΩ
Self Inductance:	1.1nH
Insertion loss:	<1dB to 11.5 GHz
	<3dB to 19.3 GHz
Pin to ground Capacitance:	0.58pF
Current carrying capacity:	1.5A

Socket Maintenance

Setting up a Preventative Maintenance Program is important in maintaining both Socket and Test Probe life expectancy as well as good electrical continuity which will help minimize false rejects and low test yields. Generally, light cleaning is recommended for a preventative maintenance program of the test socket assembly. The most effective way to determine a schedule is by tracking test yields. The maintenance schedule should be based on when yields begin to fall below the performance of a new test socket. Some customers perform light cleanings on a per day basis or at 20,000 or 50,000 cycle intervals. The schedule depends on the amount of debris or contamination that the socket and test probes are subject to.

The following items should be included in a typical maintenance program.



- Regular visual inspection to identify abnormal wear and contaminants on the socket or test probes.
- Examine the composition of any debris present and determine its source. Try to minimize the source of debris if possible.
- Verify that the socket is properly mounted to the load board and that it's flush to the top surface of the load board.
- Do not use any chemicals for cleaning the socket.
- Do not use any lubricants for test probe cleaning.

Light Cleaning Procedure

Required equipment needed:

- Soft to medium bristle nylon brush
- Set of screwdrivers
- Set of Hex / Allen wrenches
- Small electronics industrial vacuum
- Non-powdered latex or rubber gloves or finger cots

Cleaning Procedure

- Remove the socket from the load board and brush any debris from the solder pads of the load board while vacuuming.
- If the socket is equipped with a manual lid remove or open it to gain access to the test probe tips.
- Hold the test socket in the vertical position, brush and vacuum at the same time to avoid any contaminants going inside the socket or working their way into the test probe assembly. (This operation is sometimes easier with two people)
- Rotate the socket 90 degrees and repeat the previous step.
- Brush and vacuum the socket including the nest if equipped.
- Re-assemble the socket onto the load board when cleaning is complete.
- If your test socket is to be put in storage it is recommended that the light cleaning procedure be performed before storage so that any harmful contaminants left on the test probes do not harden and become difficult to remove. For example solder buildup will oxidize over time and will permanently damage probe tips.
- Always store the socket assembly in a dust free fully enclosed package.

What to avoid when cleaning

- Use of compressed air is <u>strongly discouraged</u>. Compressed Air will drive contaminants into the internal working parts of the test probes.
- Do not apply solder or heat to the test probes.
- Use of alcohol or other cleaners can leave a residue and carry contaminants into the internal working parts of the test probes.
- Repeated mechanical cleaning of the probe tips will shorten the time period between required maintenance and more importantly it will start to remove surface plating which can result in continuity issues as well as contact failures and elevated resistance.



Tel: (800) 404-0204 • (952) 229-8200 Fax: (952) 229-8201 11351 Rupp Dr. Suite 400, Burnsville, MN 55337 www.ironwoodelectronics.com

• Heavy cleaning should be avoided if possible and if needed should only be performed once in the lifetime of the test probes. Heavy cleaning can be done by using the same tools and methods as with light cleaning with the exception of a soft brass brush being used with a very small amount of alcohol. Remember that an excess of alcohol and heavy brushing can lead to damage as well as unfavorable test results.

Heat Sink Specifications

For high power dissipation, a specific heat sink lid can be designed using QFIN software. Please call Ironwood Tech Support @1-800-404-0204.